

# WuduMate<sup>®</sup> Installation Guide

WUDUBASIN 

Keep your area smelling fresh with WuduMate's McAlpine Waste trap. Our WuduBasins come equipped with these traps, preventing plumbing odours from spreading.


## Contents included with the WuduBasin

- 2 x McAlpine Waste Traps
- 3 x Flexi Pipes
- 1 x Bowl Spout
- 1 x Bowl Control
- Wall-fixing Brackets (quantity as per requirement)
- Taps (quantity as per requirement)
- Tap Screws (quantity as per requirement)
- 1 x Bottom Drain
- 1 x Top Drain

1. Carefully remove the contents from its packaging.
2. Locate the wall mounting brackets and the sockets behind the basin where the brackets connect.
3. Drill and fix supplied fixings into the wall between 780mm – 815mm off the floor and 350mm apart.
4. Install taps and water supply according to your preference - Refer to diagrams 1.1 and 1.2. Flexi-pipe fittings: 1/2" BSPP x 25 x 30
5. Install McAlpine waste/trap in the WuduBasin and connect to mains drainage system. Refer to diagram 1.3
6. It is recommended that you do not seal the basin to the wall with silicone, as this will make it difficult to remove the basin from the wall in circumstances if the lower basin gets clogged.
7. Carefully lift the WuduBasin, and mount it onto the fixed brackets
8. Once installed, polish with a non-abrasive cloth to remove any marks


## Option 1.1:

### Pre-mixed water to basin, footbath manually controlled

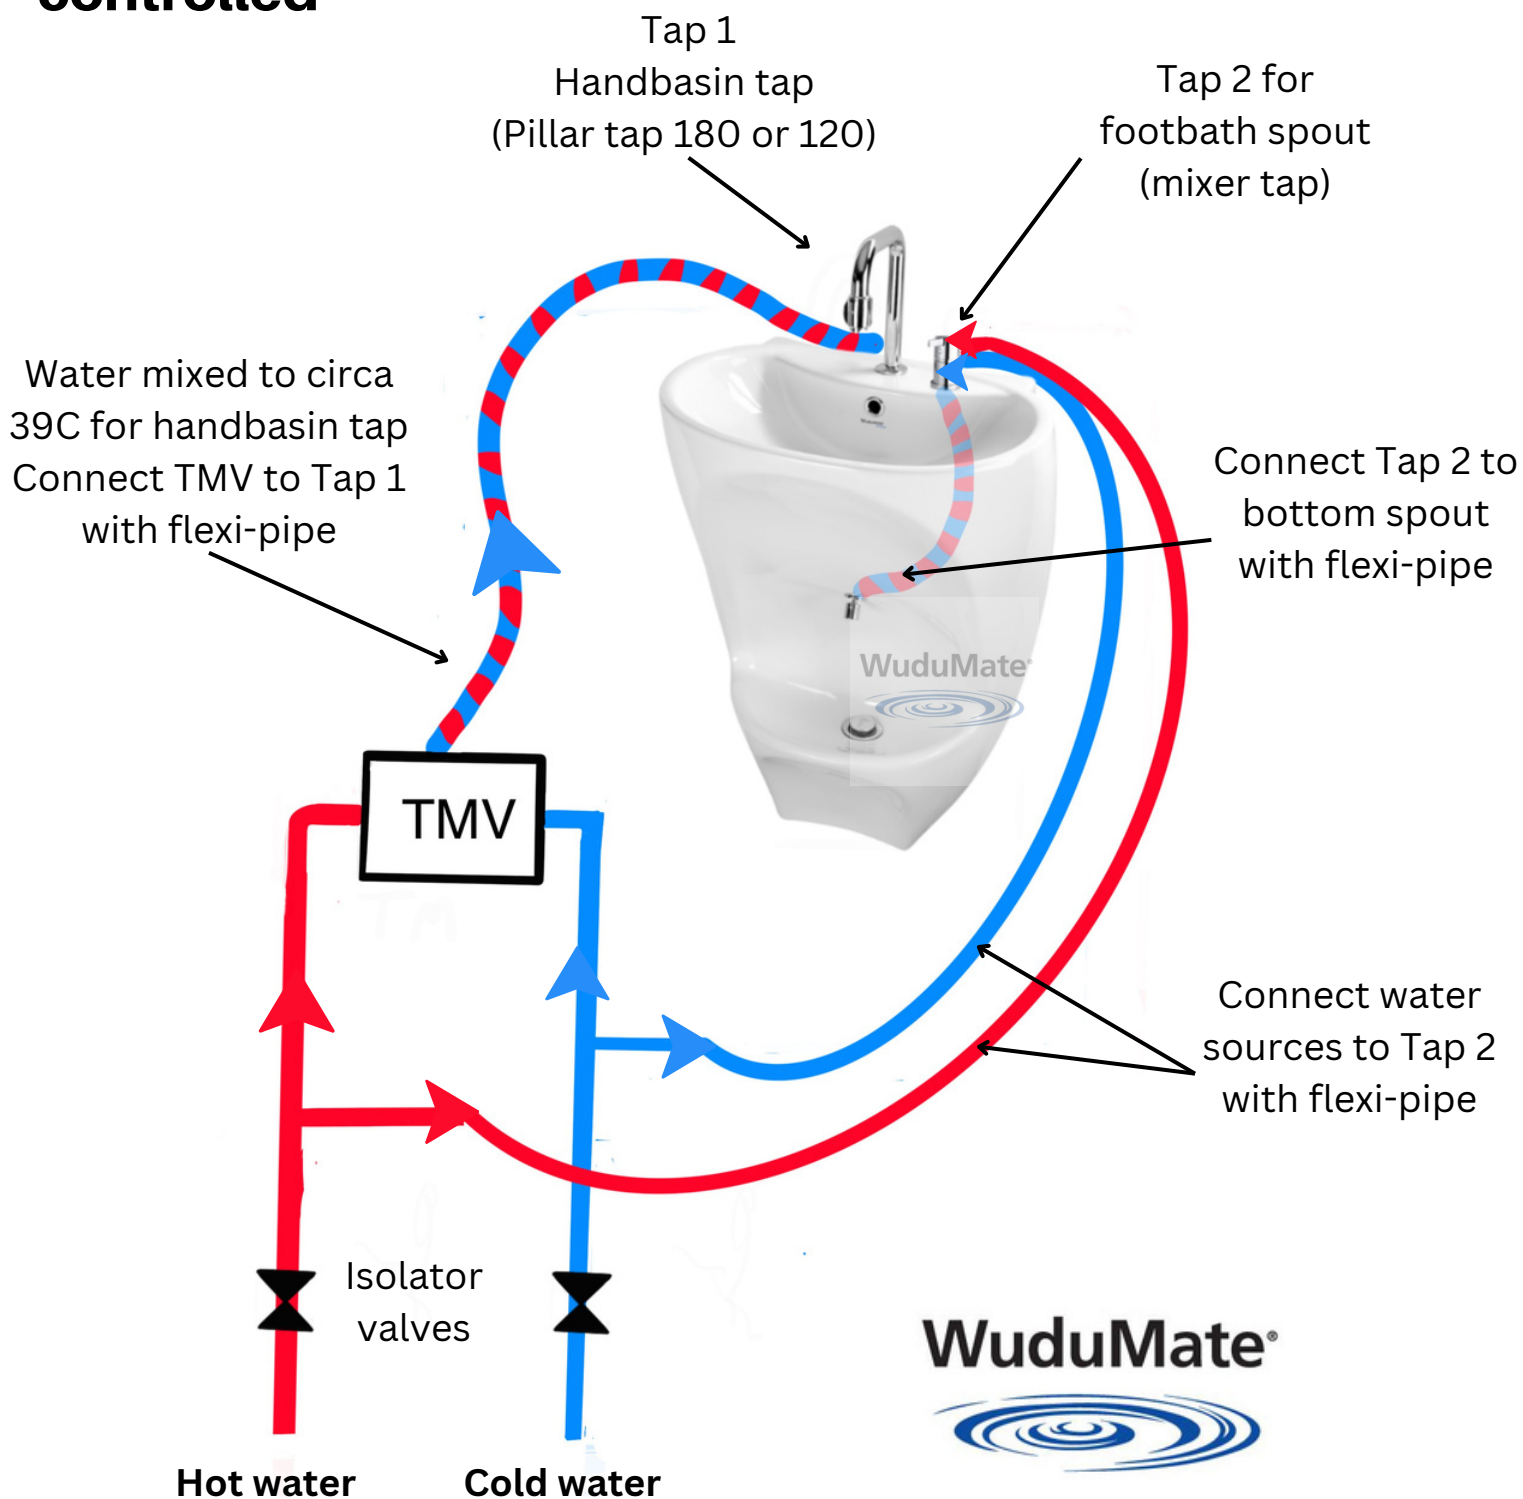

## Option 1.2:


### Manually controlled handbasin and footbath

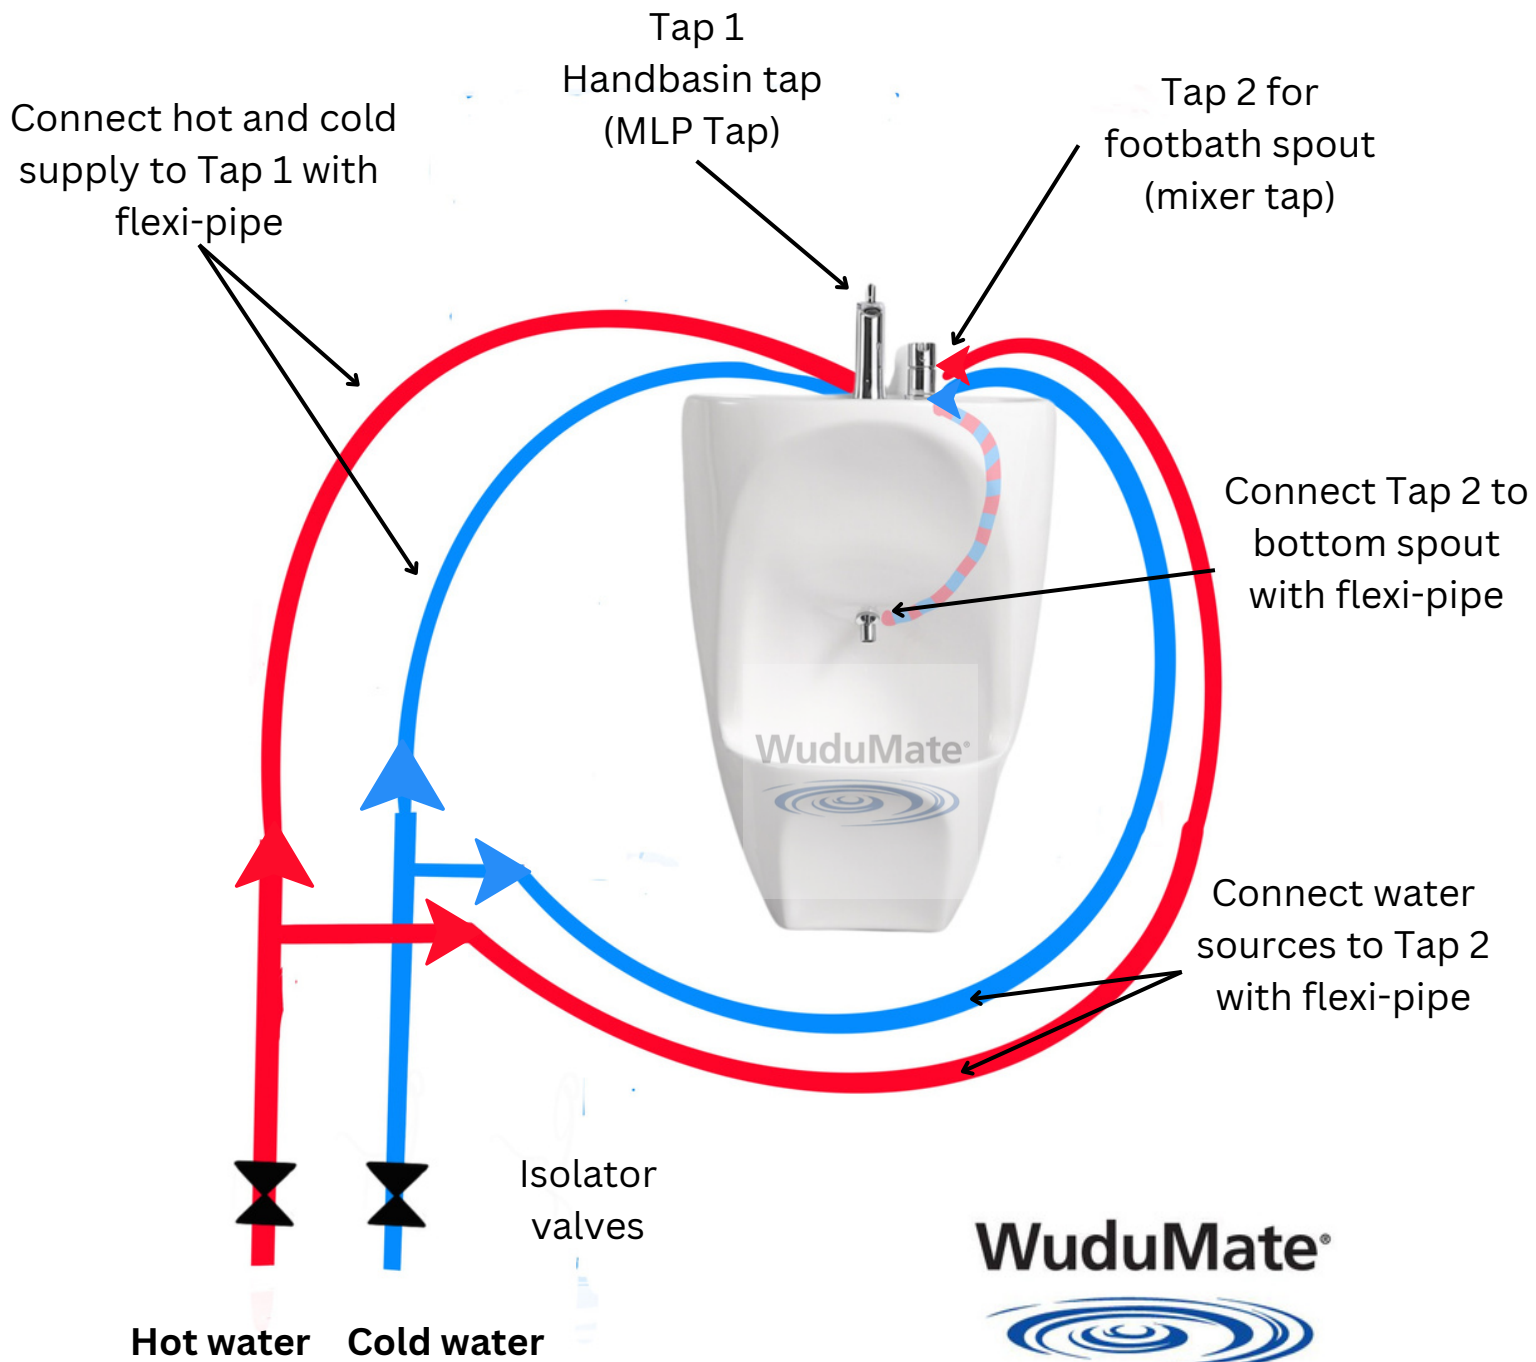



## Diagram 1.3:

Rear of unit showing McAlpine Wastes

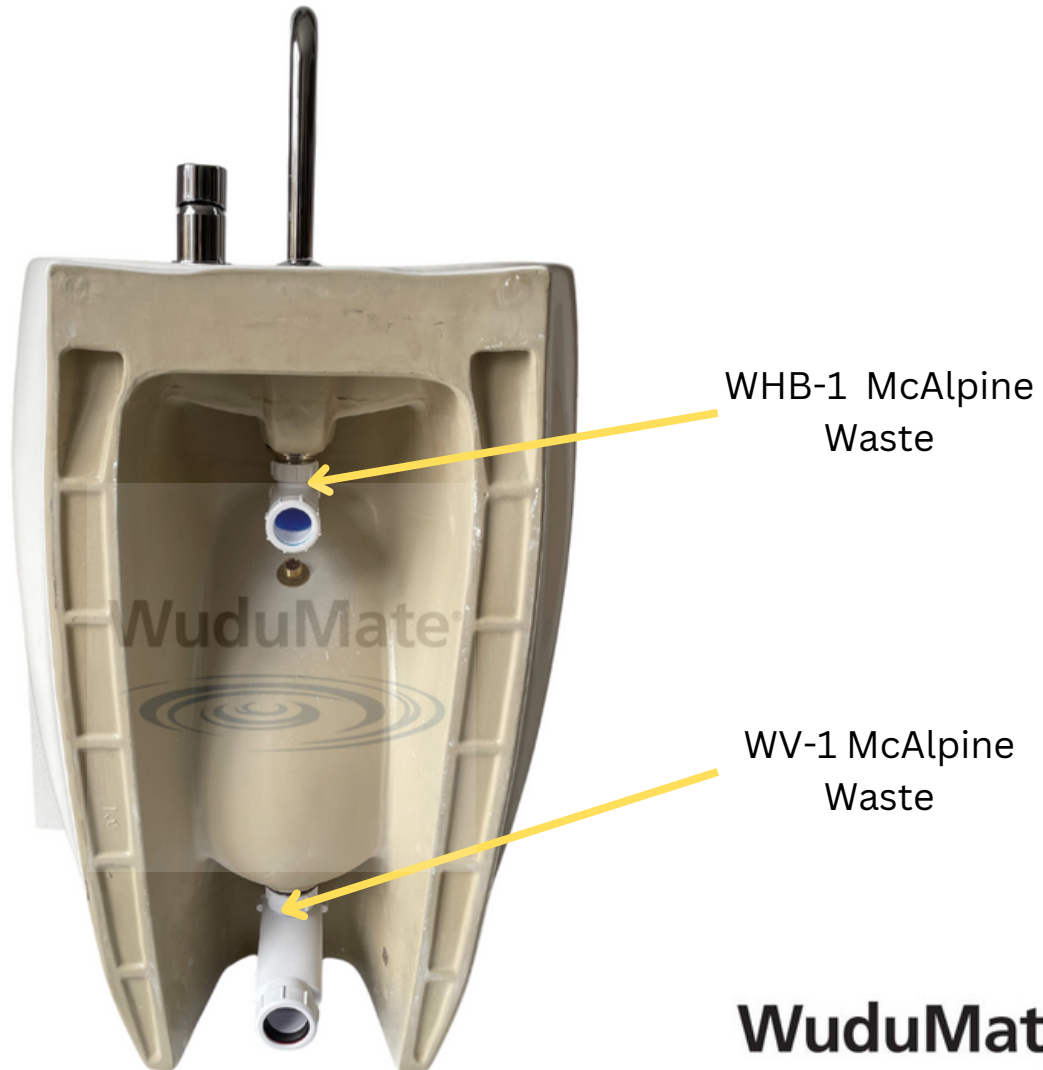

WHB-1 McAlpine  
Waste

WV-1 McAlpine  
Waste

**WuduMate**<sup>®</sup>

